TOCLS-OE100
TOCLJ-OE100
Install Manual

INSTALLATION PREPARATION

Before starting installation:

1. Familiarize yourself with the installation instructions.

2. Inspect kit components (Refer to kit contents and hardware bag contents parts list located at the rear of this manual).

3. If you have any questions during this installation, please contact Audiovox Technical Support at 1-800-323-4815.

VEHICLE PREPARATION

4. Place protective coverings on vehicle.

5. Disconnect negative battery cable

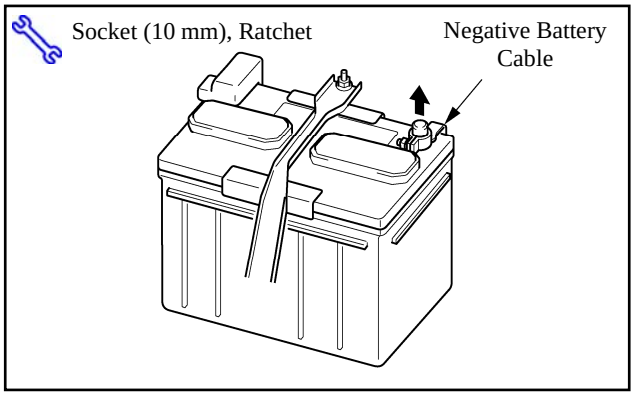

6. Place trim panel removal tool under the side trim.

7. Remove side trim on both sides of the radio.

8. Grasp the AC vent panel and pull forward to remove.

9. Unplug the hazard control button.

10. Using a ten millimeter socket remove the radio mounting bolts.

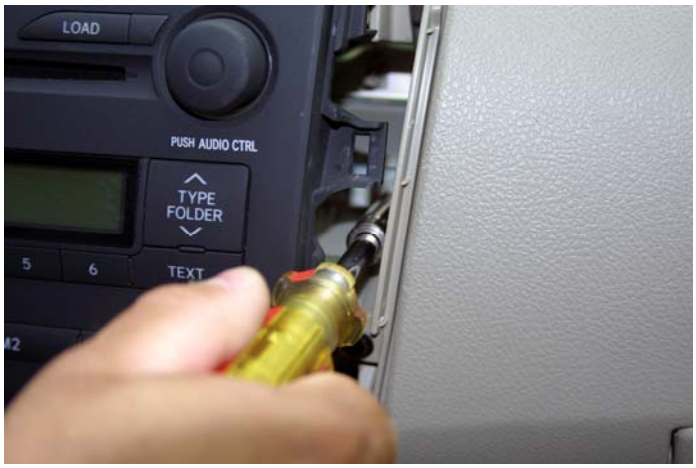

11. Unplug all wiring harnesses from the radio.

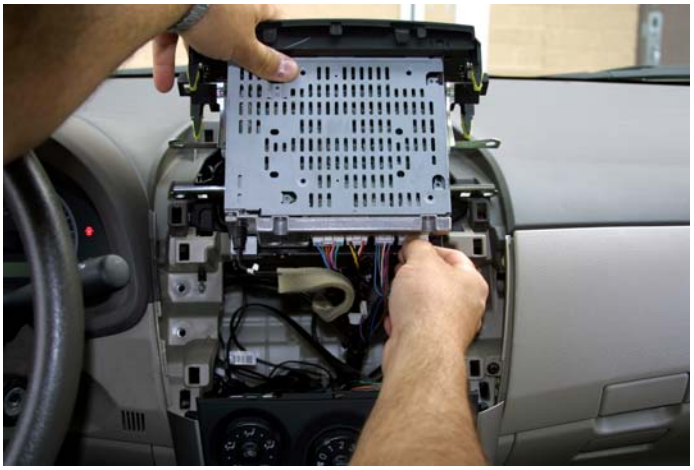

12. Remove the mounting brackets from the radio.

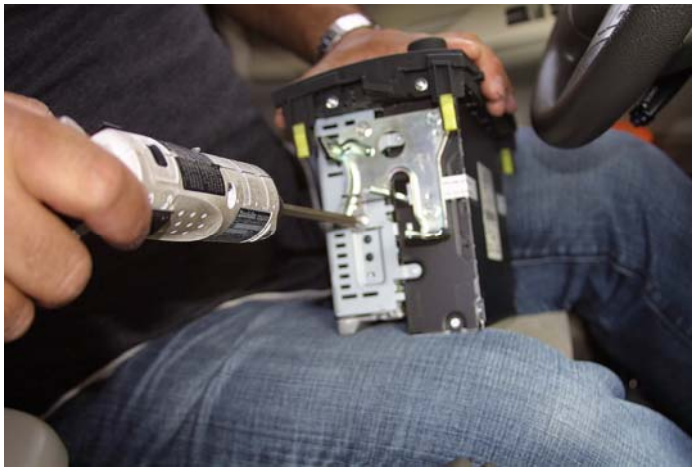

13. Install the brackets on to the new radio.

Handsfree Microphone Installation

14. Remove the door weather strip gasket along the A-pillar.

15. Remove the handsfree microphone antenna from the package.

16. Using the trim panel tool, pull the side airbag slightly away from the A-pillar.

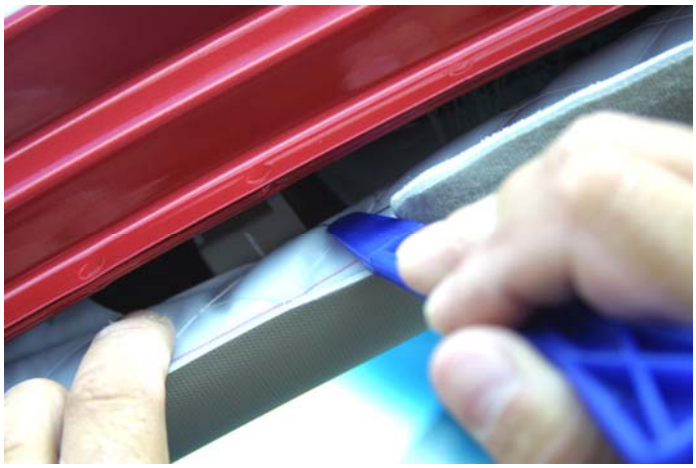

17. Run the handsfree microphone plug between the side airbag and A-pillar.

18. Run the handsfree microphone plug between the dashboard and the A-pillar. Once the wire is positioned behind the dashboard, continue routing the wire to radio opening.

19. Mount the handsfree microphone and clip as shown the illustration.

GPS Antenna Installation

20. Remove the GPS antenna from packaging.

21. Mount the GPS antenna on the top of the AC vent.

22. Release the glove box door and lower it.

23. Place USB/AV2 Interface Module in the glove box and route the wire harness to the back of the radio.

24. Attach all wire harnesses to the rear of the radio. Plug matching color connectors together.

NOTE: Route the brown parking brake wire down to the center console emergency brake switch.

25. Reinstall the radio in the dashboard in the reverse order of disassembly.

26. Reconnect the negative battery cable.

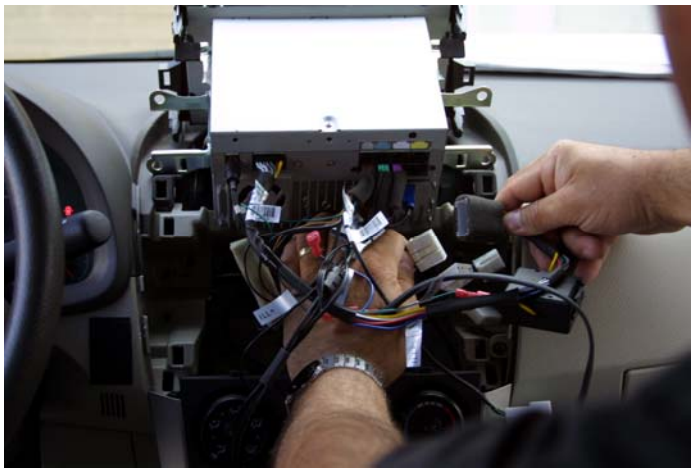

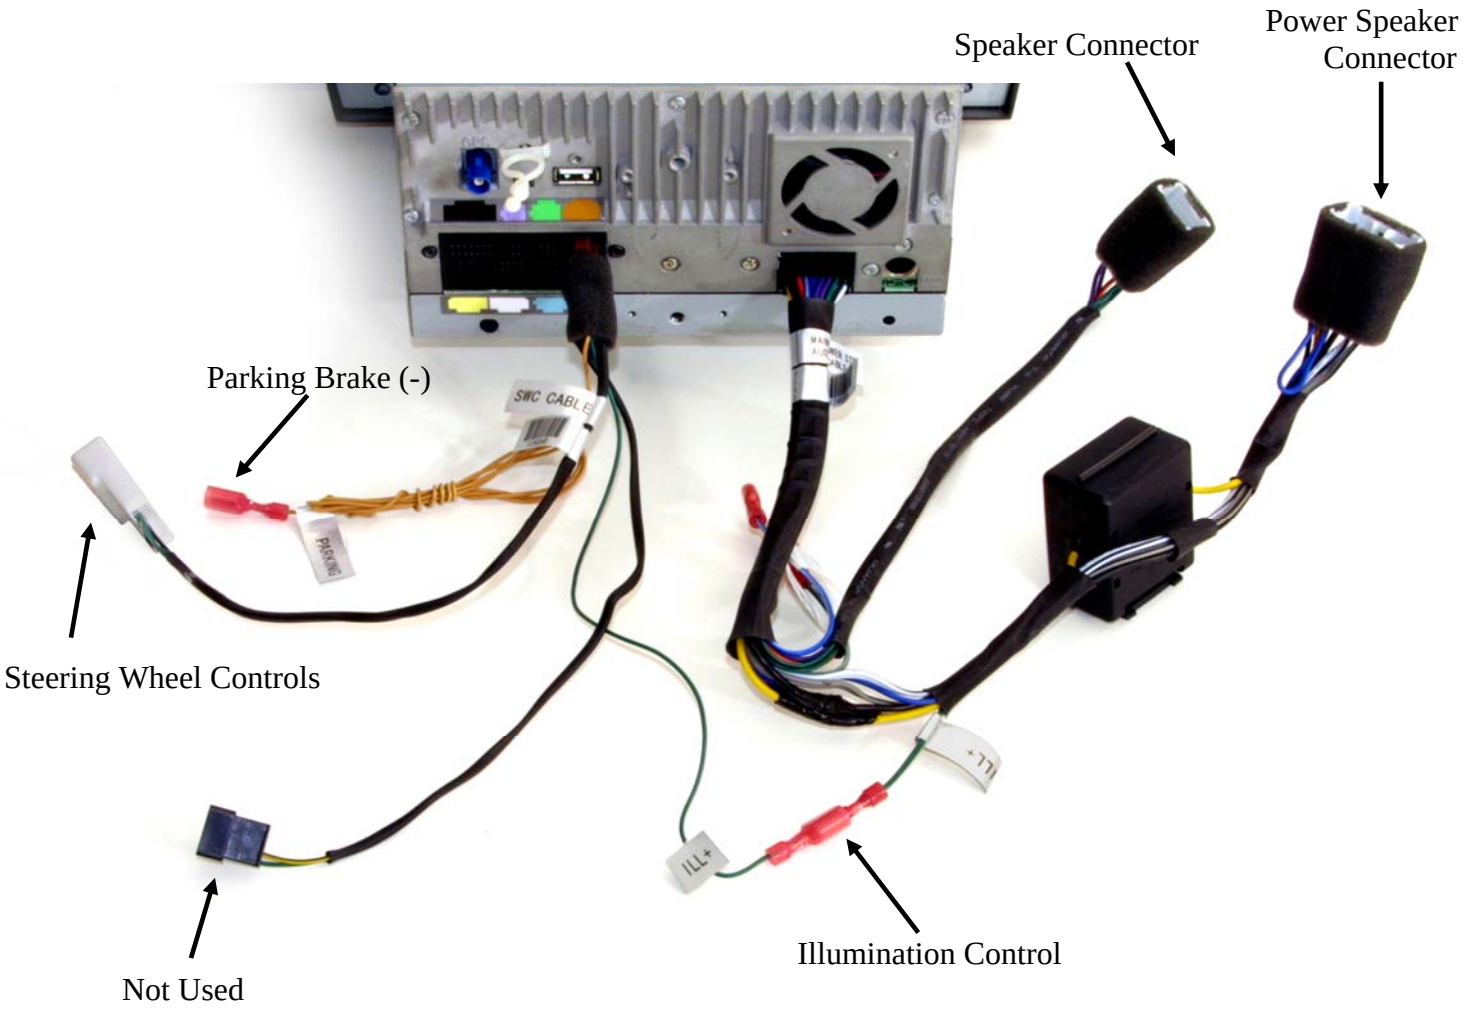

Non JBL Connection Diagram

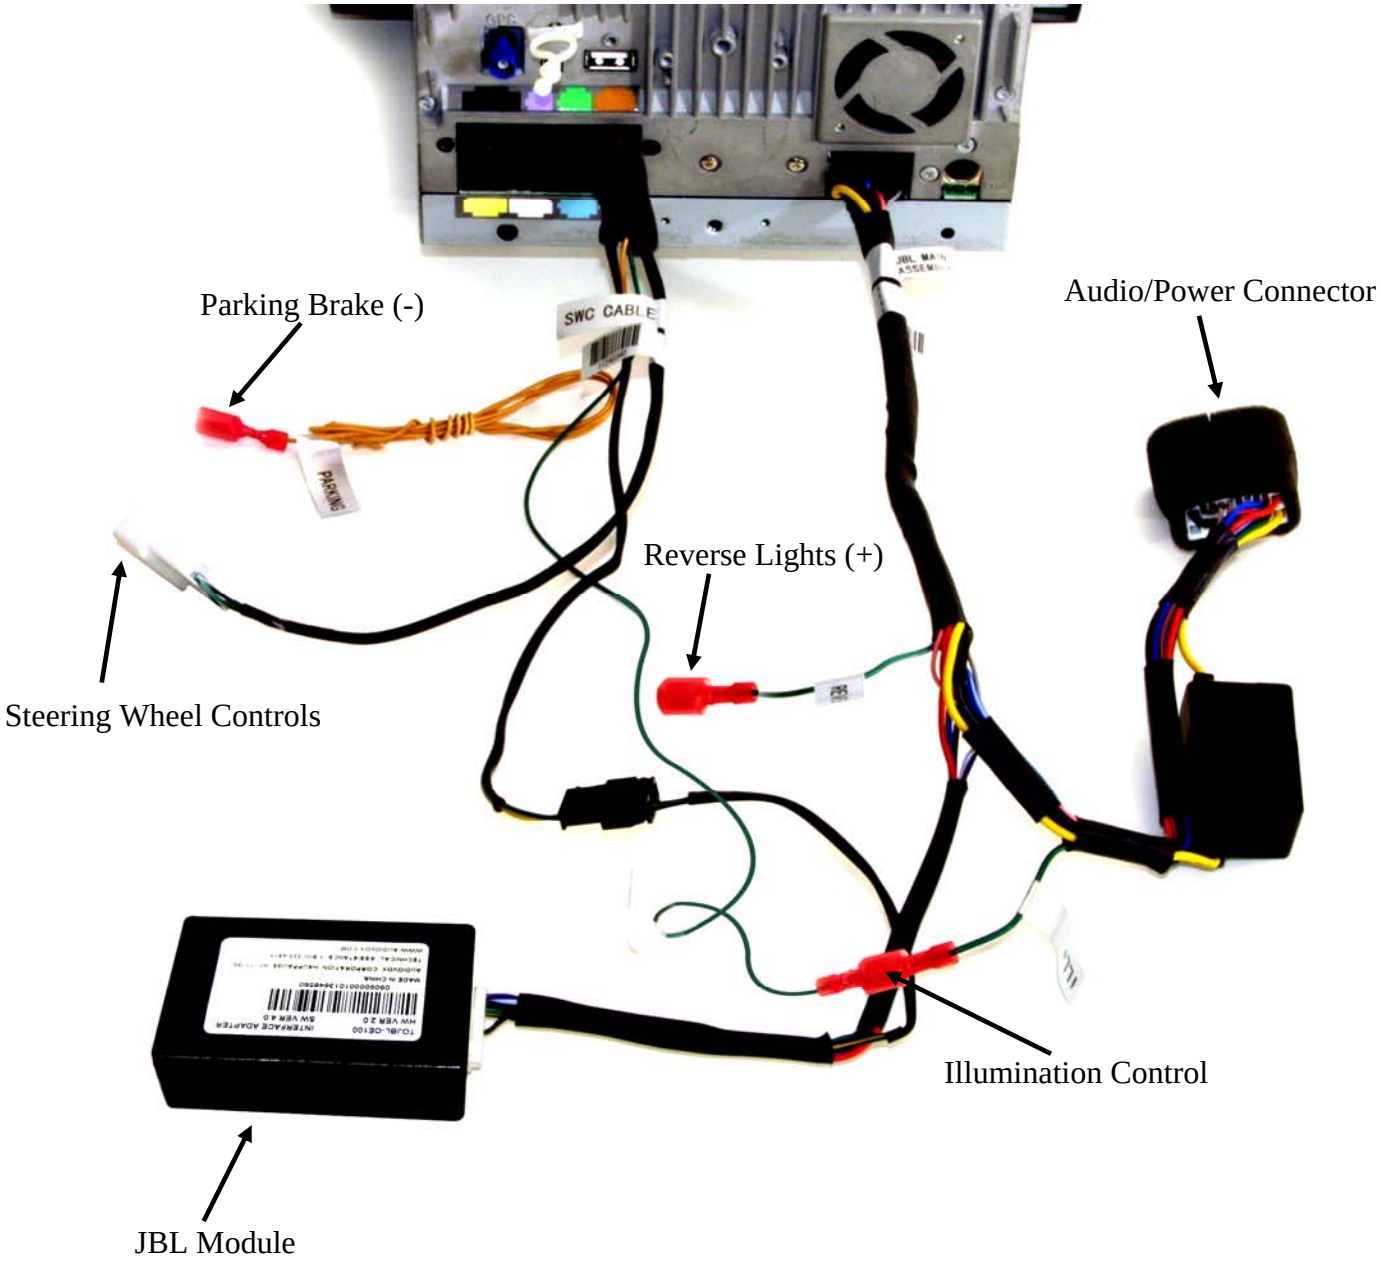

JBL Connection Diagram

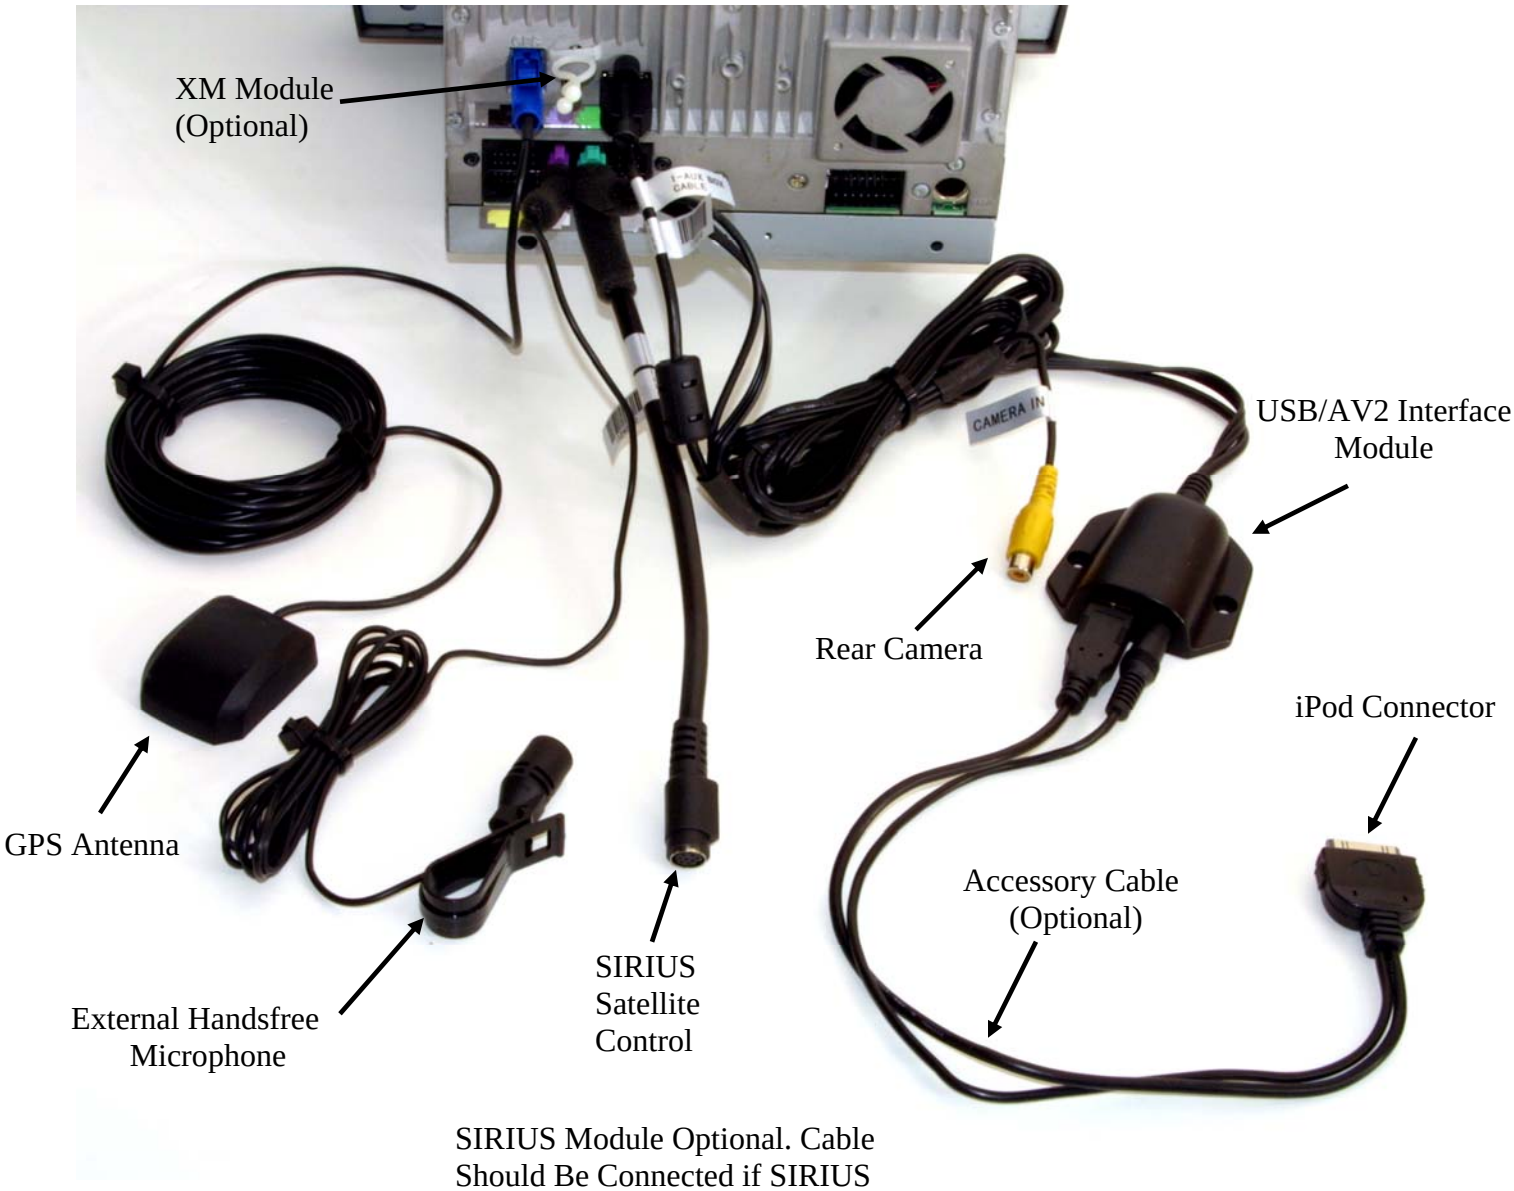

Harness Layout Diagram

Label Placement

After the installation of the radio is complete, the factory AUX/USB port will no longer function. Place the black ahesive sticker to cover the lettering of the original port. Refer to illustration above.

USB/AV2 Interface Module

Two labels are provided for the USB/AV2 Interface module to accommodate various mounting positions.

Toyota Radio Parts List

Item	QTY Unit	Part Number	Title
1	1	136-4853	Remote Control 1 with Battery (Front Zone)
2	1	130-2844	Polybag For Remote Control
3	1	136-4855	External Microphone
4	1	130-5217	Polybag for External Microphone
5	1	118-1221	GPS Antenna
6	21	138-1456	Velcro Strip,1" x 1.5"for GPS Antenna
7	1	130-5218	Polybag for Antenna
8	1	130-5219	White Cardboard Box for Antenna
9	1	112-4031 PS	USB/Aux Interface Cable(for iPod or AV2 input)
10	1	150-1747	Hardware Kit for USB/AUX Interface Cable
11	1	112-4033	Main Power & Audio Cable
12	1	112-4034	Steering Wheel Control Cable
13	1	112-4035	Sirus Cable
14	1	112-4036	Reverse Extension Cable
15	1	136-4858	Microphone Connector Jumper Assembly (installed on Radio)
16	1	100-2520	Cable Retention, Plastic
17	1	130-5222	Polybag for Cable Retention
18	1	130-5188	Cardboard Accessory Box
19	1	Label 2 170-0123	Label Part Number, 8 Digit (132B7001) Apply to Items 1, 3, 5, 9, 10, 11, 12,13,14
20	2	102-4629	Screw Cap
21	2	100-2525	Screw, Mounting
22	2	132-7630	Label 1, AV2 with USB Symbol
23	2	132-7645	Label 2, USB Symbol with AV2
24		130-4077	Polybag for Cable Retention

© 2009 Audiovox Electronics Corp. 150 Marcus Blvd. Hauppauge, NY 11788